

CANopener™ FLASH

Quick Start Guide



STEP 1


INSERT

With the key either in run or ACC, insert the CANopener Flash into the vehicles OBD-II port. It will be located below the steering wheel, typically at the bottom edge of the dashboard.

STEP 2

REMOVE

The CANopener Flash will blink BLUE while programming and then turn GREEN or RED to indicate success or failure. Once the light turns GREEN, you can unplug it from the OBD-II port.

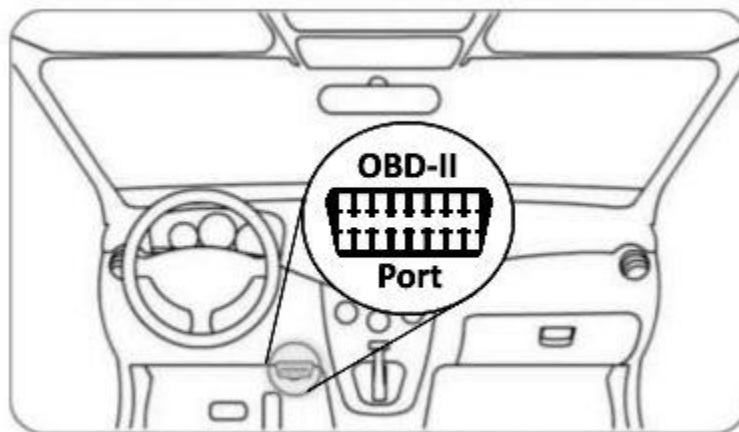

STEP 3

ENJOY!

In a matter of seconds, the Flash will disable the selected feature on your vehicle. Want to re-enable it? Simply plug the programmer back in! Each time you plug the programmer in, it will toggle the features state.