

OVERHEAD MOLLE PANEL

07-18 JEEP WRANGLER JK

MPJK-04



TOOLS REQUIRED

- + 10mm, 13mm socket
- + #4, #5 Allen tool/socket
- + 10mm, 13mm wrench
- + Cutting tool (box knife, knife, etc.)

SKILL LEVEL

- + Novice/Intermediate
- + 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful to prevent injury or damage.

TIME REQUIRED

- + Approximately 2.5 Hours

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- *Always wear eye protection when operating power tools*

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

HARDWARE INCLUDED

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.



(14) M8x20 ALLEN
BOLTS



(10) M8 NYLOCK
NUTS



(24) M8 WASHERS



(4) M8 SPRING
WASHERS



(2) M6x30 HEX
BOLTS




(2) M6 OVERSIZE
WASHERS

PARTS INCLUDED





STEP 1 | ASSEMBLE THE OVERHEAD PANEL. INSTALL THE BRACKETS FOR THE ROLL BAR. USING (2) M8X20 BOLTS, WASHERS, AND NYLOCK NUTS. SECURE THOSE BOLTS AND NUTS USING A #5 ALLEN SOCKET/WRENCH AND 10MM SOCKET/WRENCH.

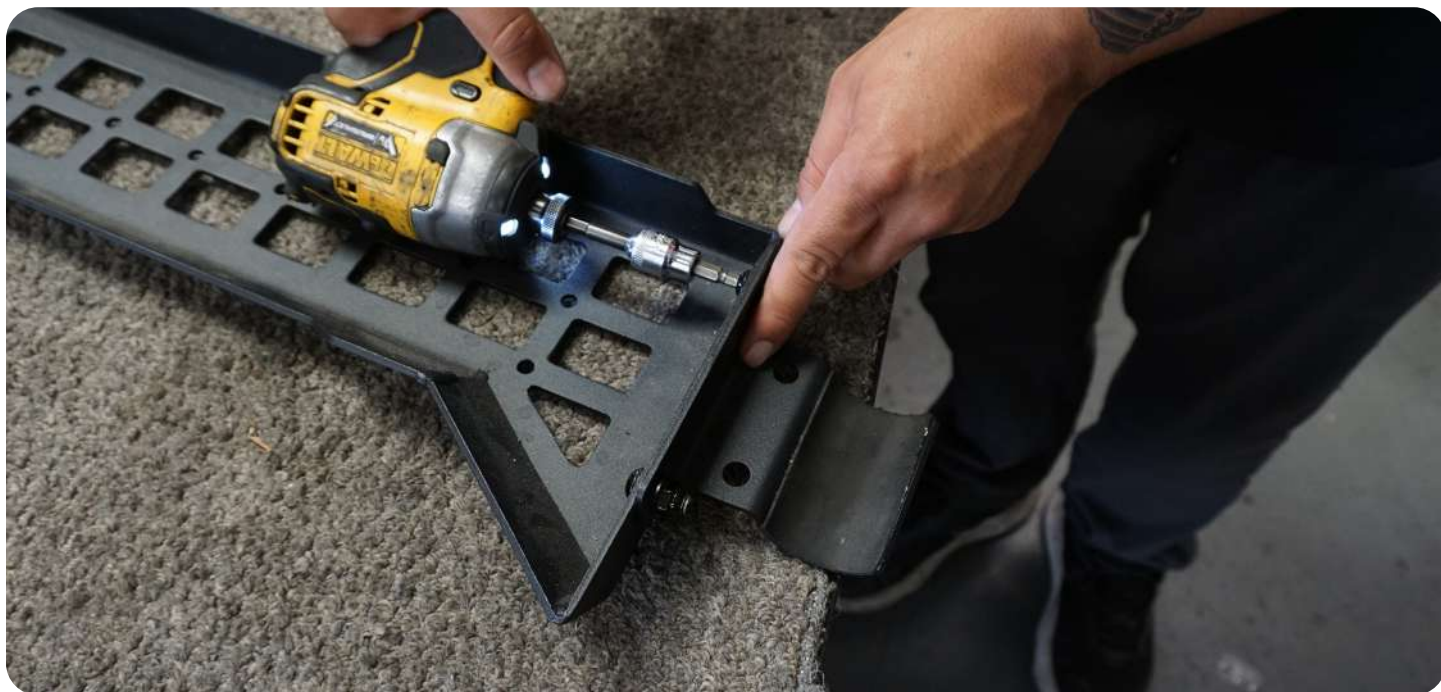

STEP 2 | PLACE MOLLE PANEL ON A SOFT SURFACE. INSTALL THE (2) MIDDLE PIECES TOGETHER USING THE (2) M8X20 ALLEN BOLTS, WASHERS AND NYLOCK NUTS. USING A #5 ALLEN SOCKET/WRENCH AND 13MM SOCKET/WRENCH, SECURE THE BOLTS AND NUTS.



STEP 3 | PLACE THE FOAM ON THE BRACKETS.

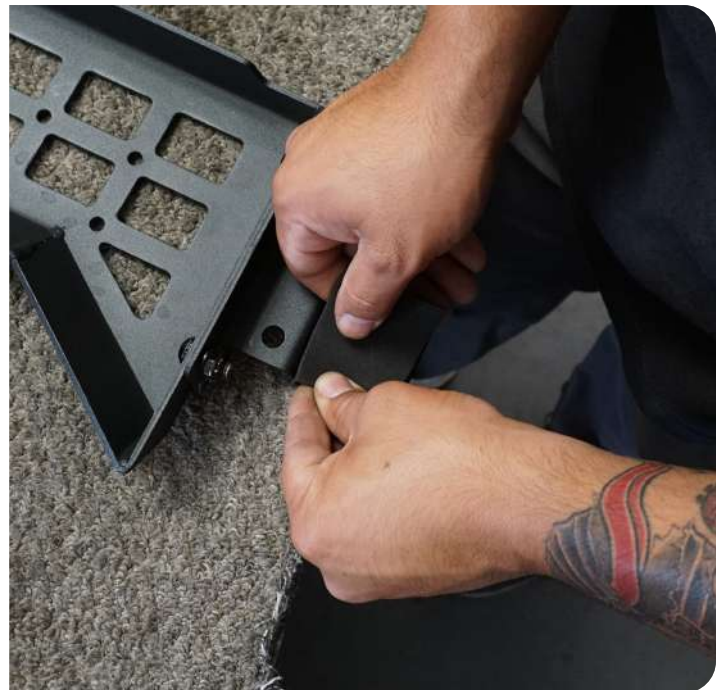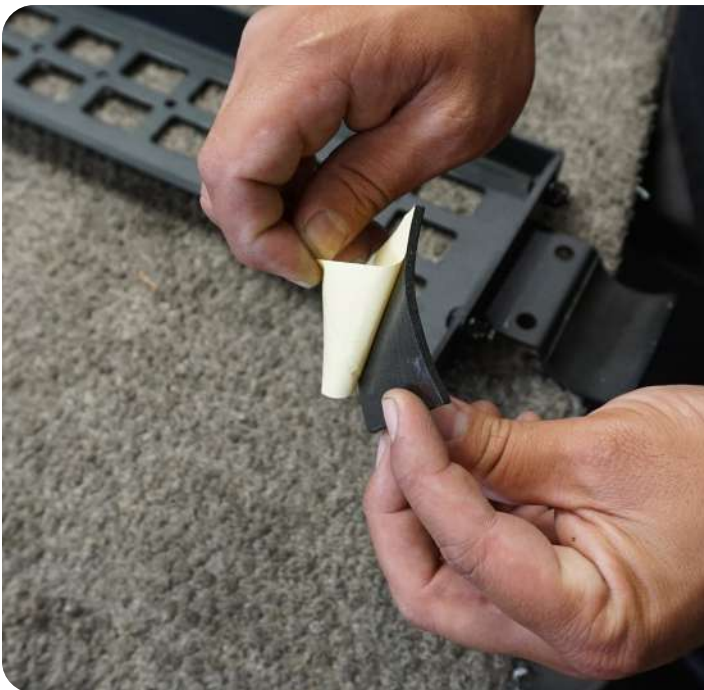

STEP 4 | REMOVE THE (2) FACTORY BOLTS TO THE LEFT AND RIGHT OF THE INTERIOR DOME LIGHT USING 10MM SOCKET.



STEP 5 | PLACE THE MOLLE MOUNTING BRACKET OVER HOLES FROM STEP #4 ENSURING THE SPACERS ARE SITTING FLUSH IN THE HOLES. INSTALL USING (2) M6X30 HEX BOLTS AND OVERSIZED WASHERS. SECURE THE BOLTS WITH A 10MM SOCKET.





STEP 6 | PLACE THE CENTER PORTION OF THE MOLLE PANEL INTO PLACE AGAINST THE REAR BRACKET AND INSTALL (4) M8X20MM BOLTS, SPLIT WASHERS, AND WASHERS. SECURE THE BOLTS USING A #5 ALLEN WRENCH/SOCKET.

NOTE: WE RECOMMEND HAVING HELP ON HOLDING UP THE OVERHEAD MOLLE PANEL TO PREVENT DAMAGE TO THE MOLLE PANEL AND INTERIOR OF THE VEHICLE.





STEP 7 | UNZIP THE PROTECTIVE CLOTH AROUND THE ROLL BAR TO EXPOSE THE FOAM GUARD.



STEP 8 | PLACE THE MOLLE PANEL AGAINST THE FOAM PADDING. WHERE THE BRACKET LAY AGAINST THE FOAM, CREATE A LINE OR DENT INTO THE FOAM.




STEP 9 | REMOVE THE FOAM PAD BY PULLING THE PAD STRAIGHT DOWN. CREATE A LINE THROUGH THE FOAM ON WHERE IT WILL BE CUT.



STEP 10 | USING A CUTTING TOOL. CUT THROUGH THE FOAM. KEEP THE LARGER PIECE.



STEP 11 | REATTACH THE LARGER FOAM PIECE BACK TO THE ROLL BAR. REPEAT THE SAME PROCESS ON THE OTHER SIDE.

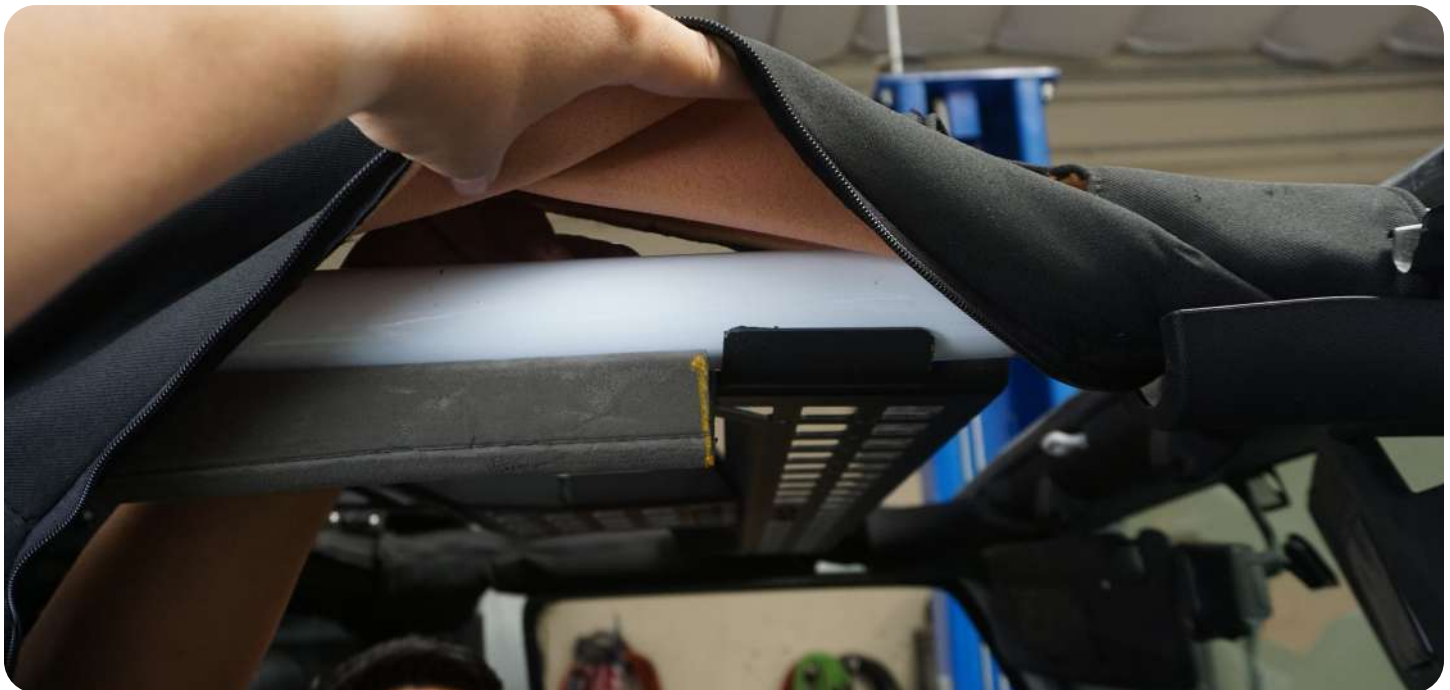


STEP 12 | CLOSE THE CLOTH TO THE ROLL BAR. PLACE THE MOLLE PANEL ON TOP OF THE CLOTH AND MARK THE SPOTS CLOSEST TO THE MOLLE PANEL. ONCE MARKED, CUT IN A STRAIGHT LINE ACROSS THE TWO POINTS.



STEP 13 | PASS THE BRACKET THROUGH THE OPENING AND PLACE THE SECOND PIECE OF THE BRACKET ON TOP OF THE ROLL BAR AND THROUGH THE CLOTH. SECURE THEM BY USING (2) M8X20 BOLTS, WASHERS, AND NYLOCK NUTS.



STEP 14 | SECURE THE BOLTS AND NUTS USING A #5 ALLEN SOCKET/WRENCH AND A 13MM SOCKET/WRENCH.

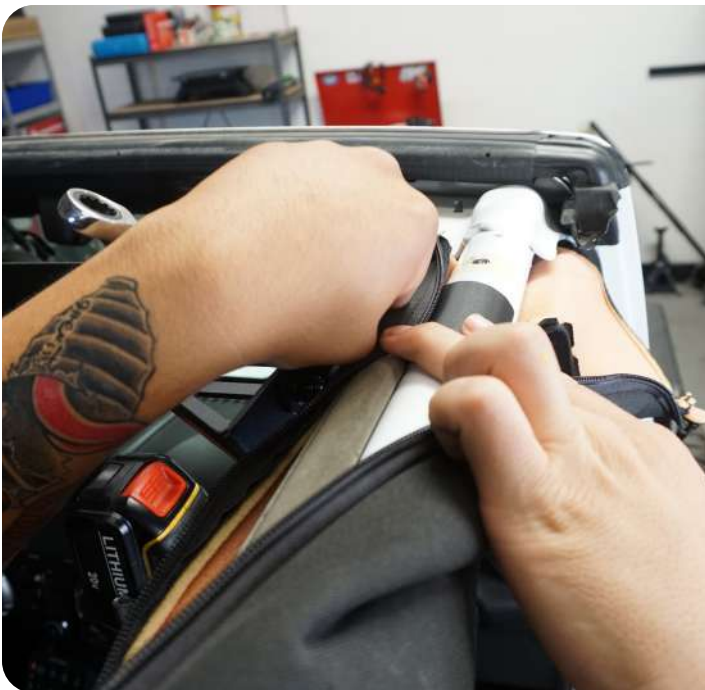

STEP 15 | ONCE THE BRACKETS ARE SECURED. FIX AND ZIP UP THE CLOTH AROUND THE ROLL BAR AND BRACKET.



STEP 16 | ENSURE ALL HARDWARE IS SECURE PANEL HAS NO MOVEMENT.



CONGRATULATIONS

YOU ARE FINISHED WITH THE INSTALL OF THE 2007-2018 JEEP JK OVERHEAD MOLLE PANEL

+ SHARE YOUR PICS

WE LOVE SEEING HOW OUR CUSTOMERS USE THEIR DV8 OFFROAD PRODUCTS AND FOLLOWING ALONG WITH YOUR ADVENTURES. TAG US IN YOUR PHOTOS @DV8OFFROAD. WE ENJOY SHARING CUSTOMER PHOTOS ON OUR FEED.



+ WRITE A REVIEW

ARE YOU HAPPY WITH YOUR NEW DV8 OFFROAD PRODUCT? WE WOULD LOVE TO HEAR AND SEE YOUR EXPERIENCE. VISIT THE PRODUCT PAGE AND CLICK "WRITE A REVIEW". ADD A SHORT REVIEW AND UPLOAD A FEW PHOTOS TO BE FEATURED ON THE PRODUCT PAGE.

WWW.DV8OFFROAD.COM

+ NEED HELP?

IF YOU ARE HAVING ANY ISSUES WITH YOUR PRODUCT, PLEASE REACH OUT. DV8 OFFROAD IS A COMPANY OF OFF ROAD ENTHUSIASTS THAT DESIGN AND USE OUR OWN PRODUCTS, SO WE WANT YOU TO BE JUST AS STOKED ON YOUR NEW PARTS AS WE ARE.

P. 855.680.9595

E. SALES@DV8OFFROAD.COM

